




Display Mounting Arm Installation Instructions

**2007.5-2014 GM
2500/3500**

Installation of Display Mounting Arm

Included Materials

2007.5-2014 GM 2500/3500

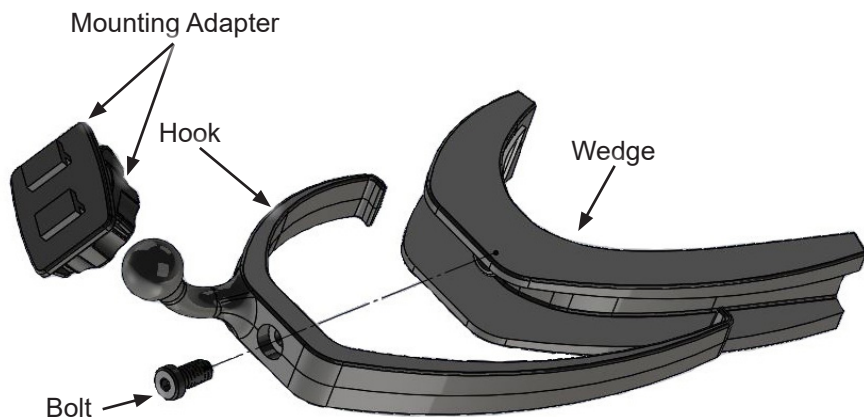

Required Tools

- 1/8" Allen Wrench

Installation

STEP 1 - Using a 1/8" Allen Wrench, loosen the bolt on the hook portion of the mount until it's only a few threads in.

STEP 2 - Peel back one corner of the backing on the adhesive and slide both pieces of the mounting arm over the A-pillar trim. Make sure that the claws are around the entire trim piece on both sides.

NOTE: *The mount can be snapped onto the top portion of the A-pillar trim and slid down until it stops.*

Installation Cont'd

STEP 3 - Once the mount is positioned approximately where shown in the image below, remove the rest of the adhesive backing and press the mount firmly against the A-pillar.

STEP 4 - Take the mounting adapter out of the bag and snap it over the ball on the mounting arm.

NOTE: *If the nut won't go onto the ball, the two pieces of the mounting adapter may need to be loosened.*

STEP 5 - Attach your device to the dual tab mounting adapter and secure the cord. Adjust the device position using the mounting bolt and/or mounting adapter nut. Once positioned, tighten the nut on the mounting adapter until secure.

NOTE: *If any of your clips holding the A-pillar trim in place are missing or broken, they may need to be replaced or the A-pillar trim may need to be secured with a screw. The added weight of the mount and display may cause the trim to fall off if the trim isn't secured.*



For additional questions not found in the user guide, call:

Holley Technical Support: (888)-360-3343

Monday - Friday, 8:00 am - 5:00 pm MST

**To expedite your support call, please have your Vehicle Information,
Part Number, and Serial Number ready prior to calling Technical Support.**



Copyright © 2025 Holley Inc. and subsidiaries. All rights reserved.

D10033700 Rev00 12/30/2024