

## INSTALLATION INSTRUCTIONS

**SUBJECT: DODGE CUMMINS 3<sup>RD</sup> GEN FUEL FILTER DELETE**

FPE-2018-16  
October, 2018  
Page 1 of 4

**FITMENT:** 2003–2009 Dodge Cummins

**KIT P/N:** FPE-FFD-RO-3G (2003- 2007 5.9L), FPE-FFD-RO-3G-67 (2007.5 – 2009 6.7L)

**ESTIMATED INSTALLATION TIME:** 1 Hour

**TOOLS REQUIRED:** 10mm deep and shallow sockets, 10mm wrench, 17mm shallow socket, ratchet

**KIT CONTENTS:**

Item	Description	Qty
1	Fuel Filter Delete Block	1
2	Water in Fuel Sensor Plug (M14x2.0)	1
3	12mm Banjo Bolt Washers	4



**WARNINGS:**

- Use of this product may void or nullify the vehicle’s factory warranty.
- User assumes sole responsibility for the safe & proper use of the vehicle at all times.
- The purchaser and end user releases, indemnifies, discharges, and holds harmless Fleece Performance Engineering, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Fleece Performance Engineering, Inc. will not be liable for any direct, indirect, consequential, exemplary, punitive, statutory, or incidental damages or fines cause by the use or installation of this product.

# INSTALLATION INSTRUCTIONS

FPE-2018-16  
October, 2018  
Page 2 of 4

## PROCEDURE:

STEP 1: Remove the intake horn.




STEP 2: Drain the fuel filter bowl by turning the yellow drain valve handle counter-clockwise. The fuel will drain through a clear tube from just below the valve.



STEP 3: Unplug the fuel heater and WIF (water in fuel) sensor from the front of the fuel filter assembly.

STEP 4: Disconnect the fuel feed line from the back of the fuel filter.

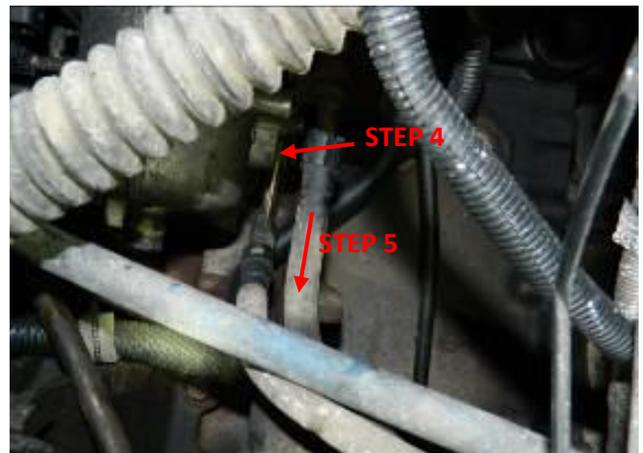


STEP 5: Use a 10mm socket to remove the fuel return line support bracket bolt.

# INSTALLATION INSTRUCTIONS

FPE-2018-16  
October, 2018  
Page 3 of 4

STEP 6: Use a 17mm socket to remove the fuel return line banjo bolts from the fuel filter assembly. There is one banjo bolt in the front of the assembly and one in the back.

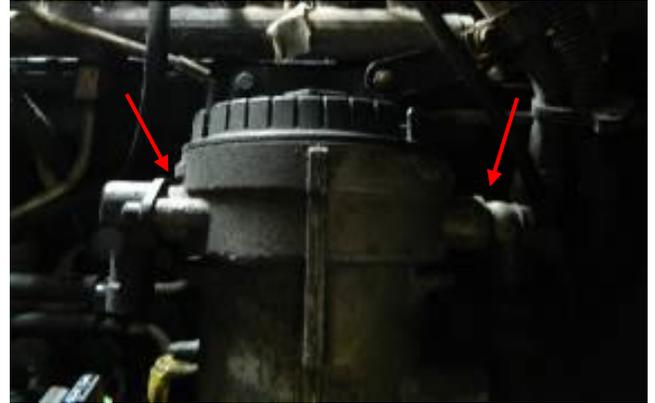


STEP 7: Use a 10mm socket to remove the two fuel filter assembly bolts that secure the assembly to the side of the head.



STEP 8: Remove the fuel filter assembly

STEP 9: Remove the WIF (water in filter) sensor from the fuel filter assembly.

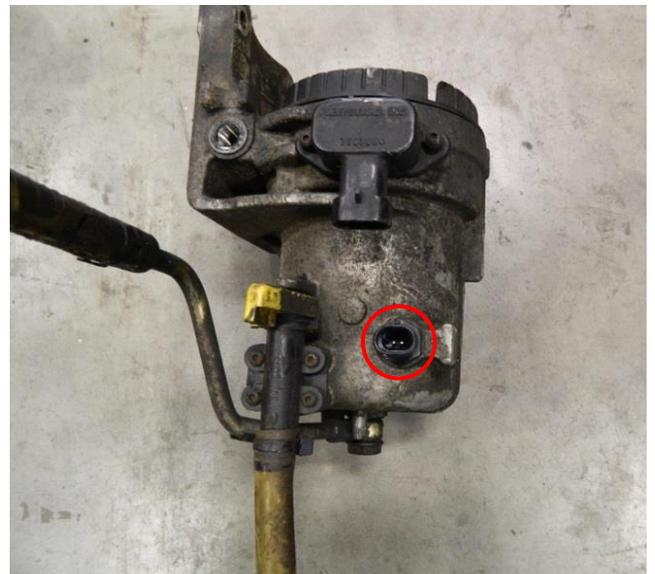

# INSTALLATION INSTRUCTIONS

FPE-2018-16  
October, 2018  
Page 4 of 4

STEP 10: Install the WIF sensor in the bottom of the fuel distribution block or the supplied WIF sensor plug.


*NOTE: Even if you have turned off the WIF sensor codes the Fleece Performance Fuel Filter Delete provides a location to put the old sensor or plug provided in your package.*



STEP 11: Using the two factory fasteners, install the Fleece Performance Fuel Delete Block to the engine in the same location as factory fuel filter housing.

*NOTE: Leave the two fasteners loose until the banjo bolts have been installed*

STEP 12: Using the supplied banjo bolt washers install the factory banjo bolts into the side of the fuel filter delete.

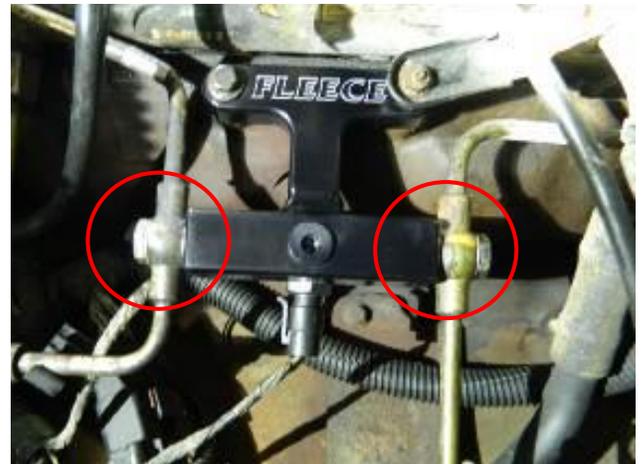

STEP 13: Tighten the fuel filter delete fasteners and torque the banjo bolts to factory spec's.

STEP 14: For dual CP3 installations; the 9/16-18 O-ring port in the front of the fuel filter delete can be used as a convenient return port.

Visit <https://fleeceperformance.com/resources> for the latest instructions and videos.

For Technical Assistance contact Fleece Performance Engineering at 855-839-5040.