

INSTALLATION INSTRUCTIONS

PRODUCT: GM ALL LIGHTS ON


FPE-2014-01
September, 2018
Page 1 of 2

APPLICATION: 2003–2007 Chevrolet 2500-3500 Silverado / Sierra

KIT P/N: FPE-GM-ALO

KIT CONTENTS:


Item	Description
1	All Lights ON Circuit card

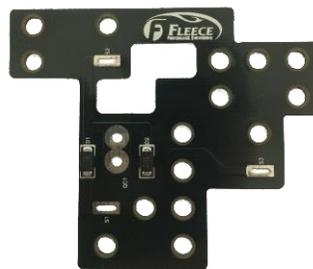

TOOLS REQUIRED: None

INSTALLATION PROCEDURE:

- STEP 1: Remove the relays labeled: FOG LP, HDLP-LOW, DRL, HDLP-HI from the vehicle's fuse panel.
- STEP 2: Place the GM All Lights ON circuit board in the location shown below.
- STEP 3: Reinstall the relays back into their original location.

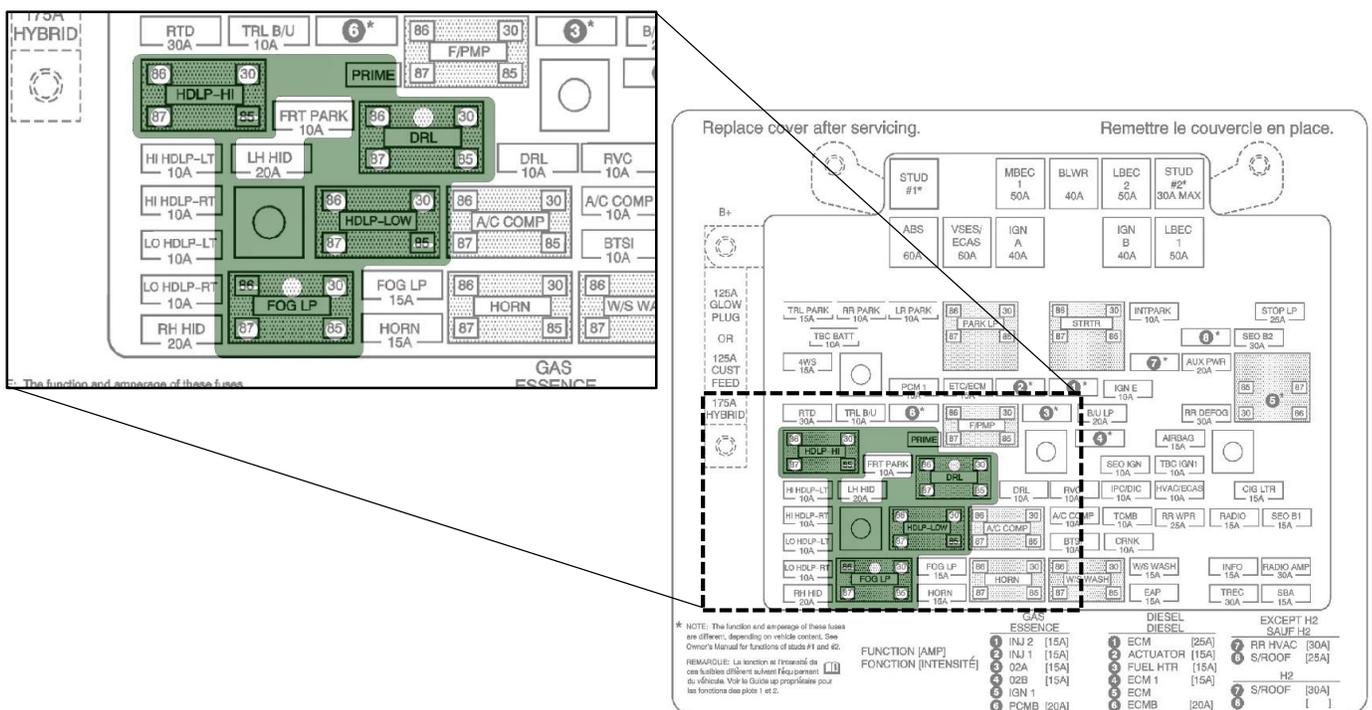

WARNINGS:

- Use of this product may void or nullify the vehicle's factory warranty.
- User understands that motorsports are dangerous, and that installation of this product may subsequently require special driving skills or techniques to safely operate the vehicle.
- User assumes sole responsibility for the safe & proper use of the vehicle at all times.
- The purchaser and end user releases, indemnifies, discharges, and holds harmless Fleece Performance Engineering, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Fleece Performance Engineering, Inc. will not be liable for any direct, indirect, consequential, exemplary, punitive, statutory, or incidental damages or fines cause by the use or installation of this product.

Visit <http://fleeceperformance.com/resources/installation-videos.html> to browse the installation video library.

For Technical Assistance contact Fleece Performance Engineering at 855-839-5040.